



## SMS1 SOS firmware update instruction

---

This instruction gives you guidance in case firmware upgrade is accidentally aborted and SMS1 enters into a special SOS mode. Below are the phenomenon.

- LED light blink constantly
- Device can NOT be restored, paired or firmware upgraded.






## Motion Sensor SOS firmware update mode instruction

Normal firmware upgrade steps are:

1. Tap 'OK' to update firmware.
2. Wait till the completion.


If the firmware upgrade process is aborted, you can use 'SOS Update' to complete the firmware upgrade.

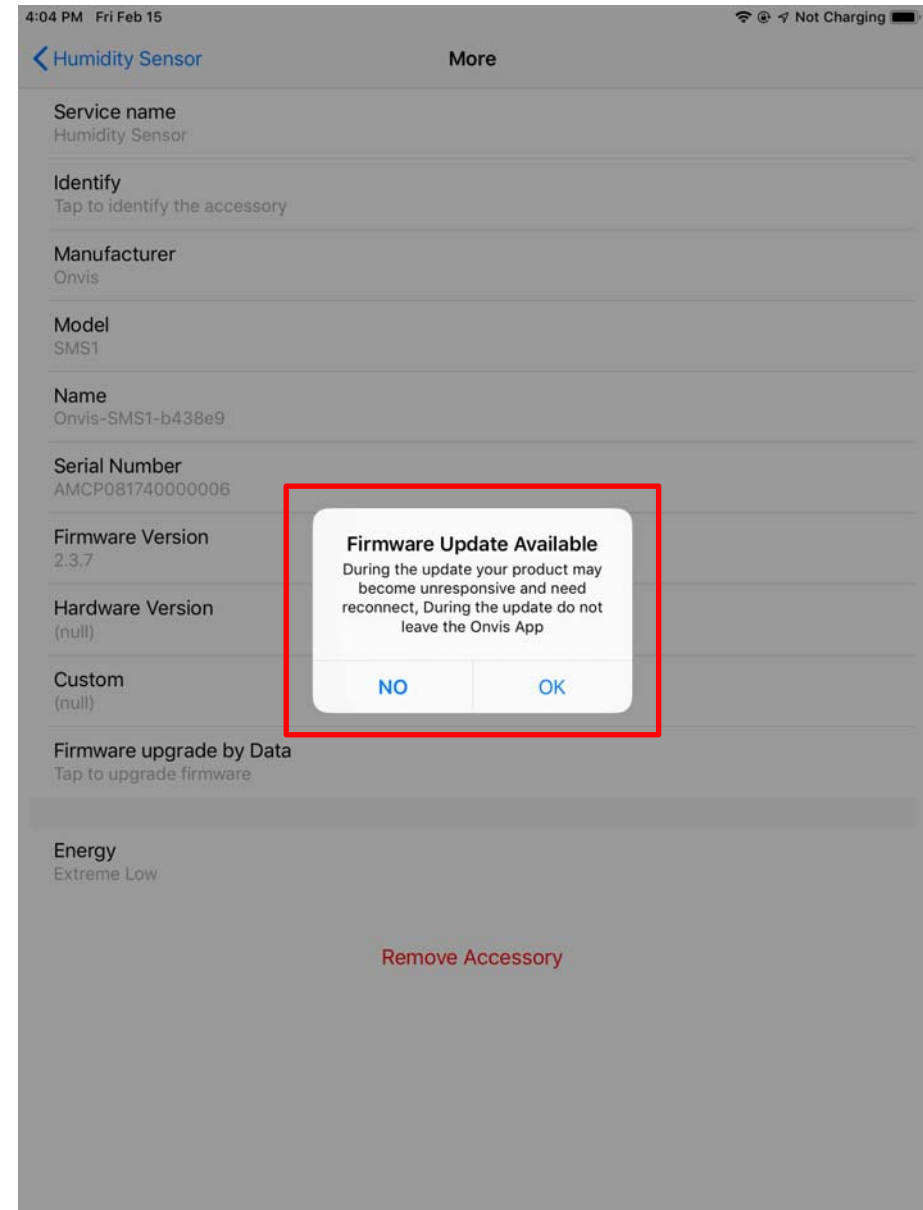



## Motion Sensor SOS firmware update mode instruction


SOS update is on page 'Me' → SOS update

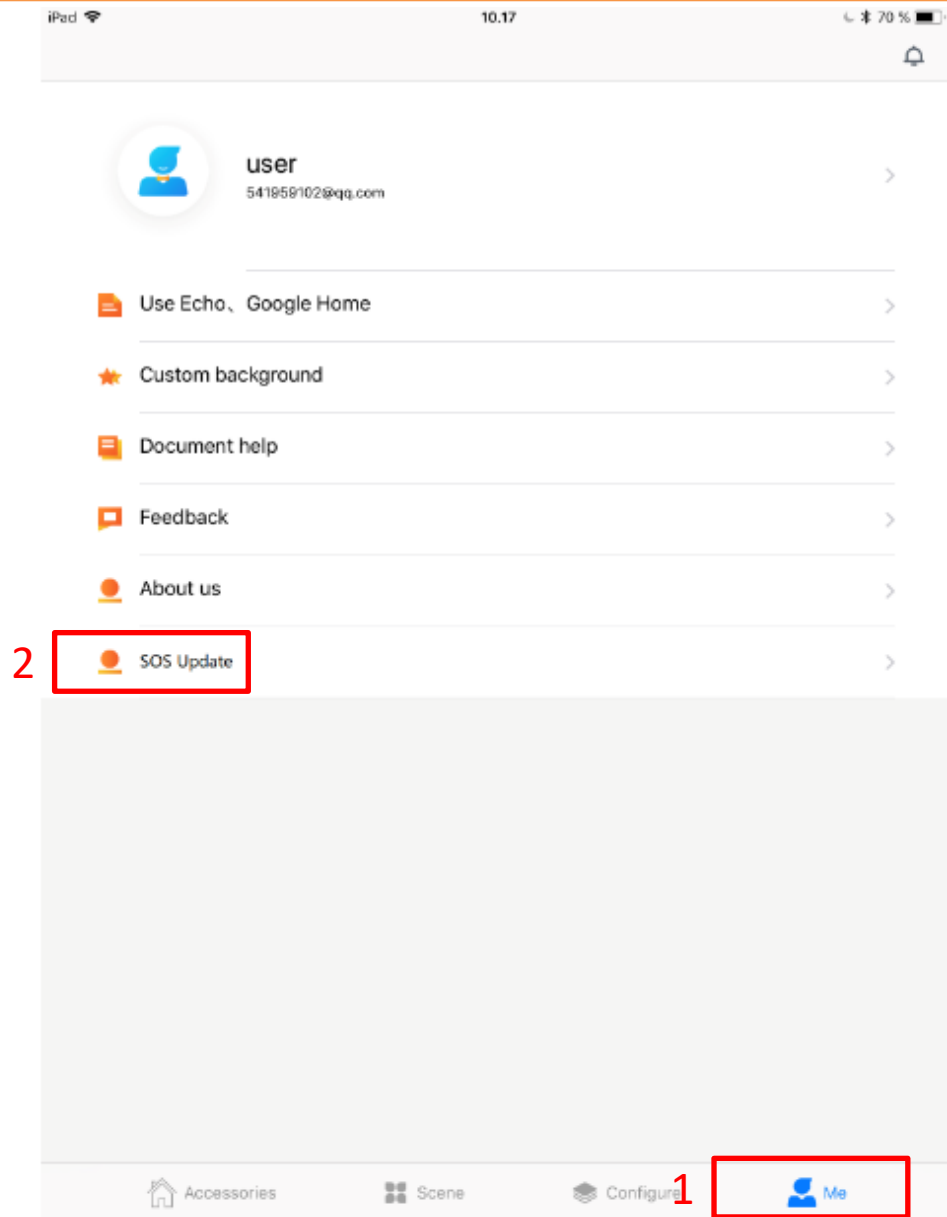



## Motion Sensor SOS firmware update mode instruction

Device with incomplete firmware update can be found. You can perform the firmware upgrade again.

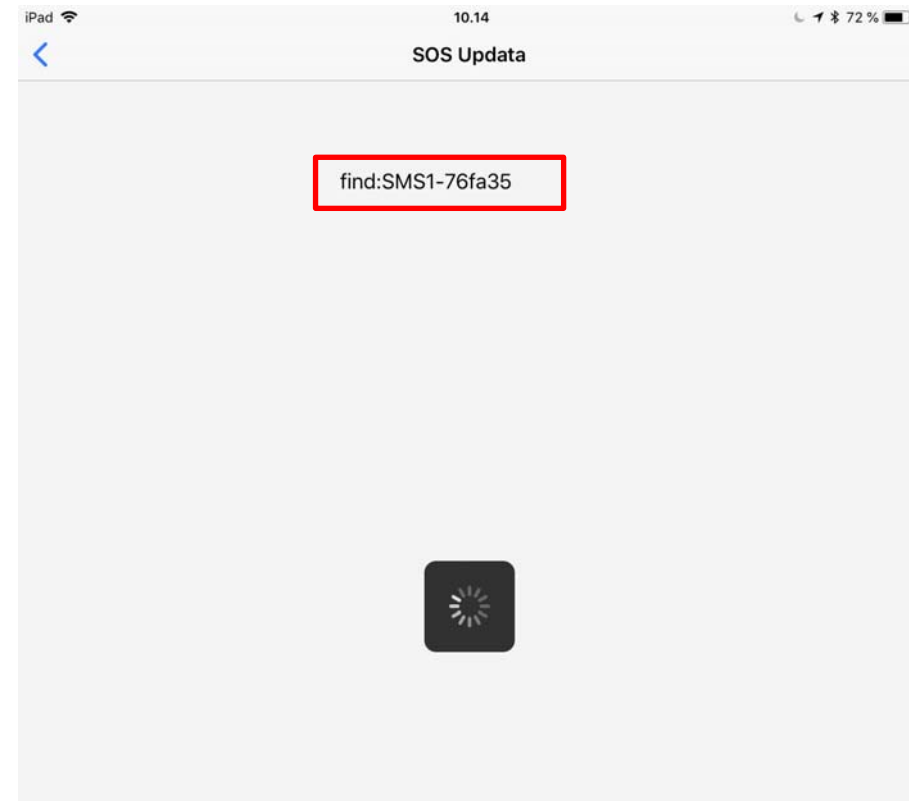

When firmware upgrade completes, it shows 'Upgrade Suceceed'.

